

# Installation Guide

## Wall Absorber

## Wall Absorber Installation


Zentia recommendation for the grab adhesive is **CT-1 Power Grab and Bond (PGB)**, by others.

If using a different adhesive, follow the manufacturers recommendations.



# Wall Absorber Installation

1

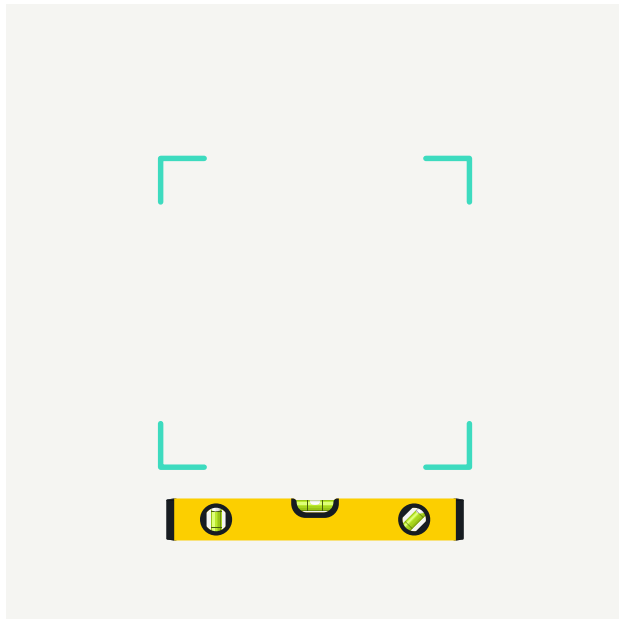


Mark out on the wall your desired positioned for the panel.

2



Ensure all surfaces are clean, dry and free from dust.

3

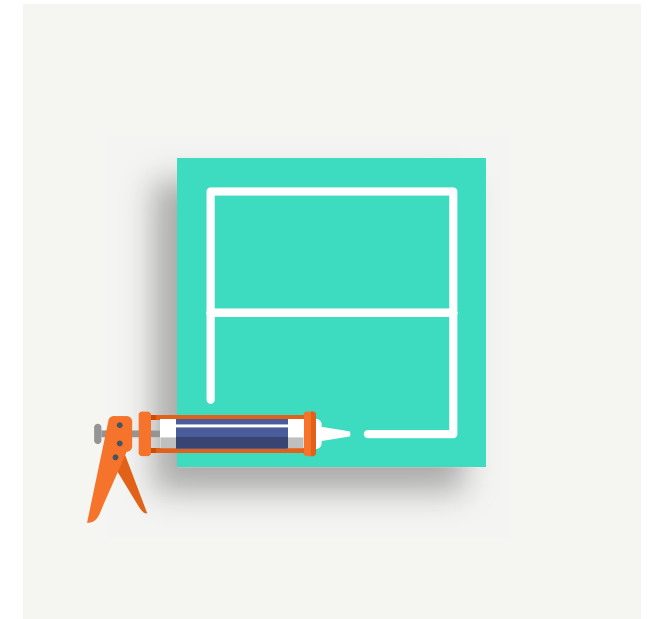

Apply the adhesive in several lines across the back of the panel, **do not** apply too close to the edge of the panel. A minimum of 450mm length of bead is required per kg weight of panel.


# Wall Absorber Installation

4




Lift panel into position and gently press to the wall. Once happy with the final position, firmly press the panel against the wall.

5

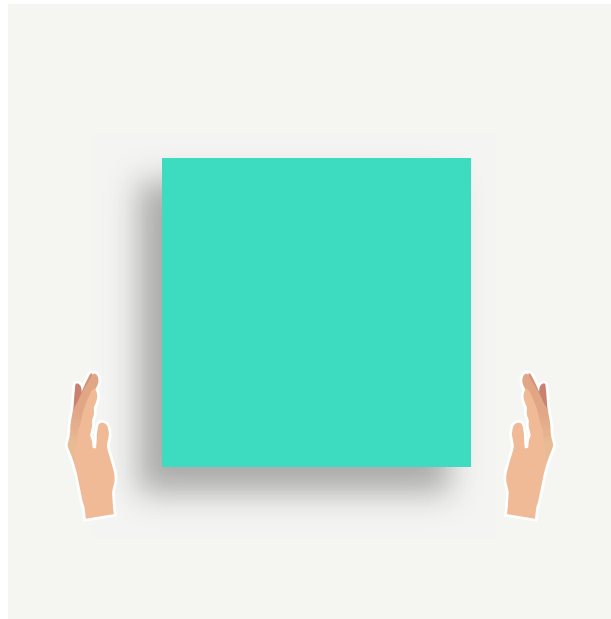

The panel should instantly grab to the wall and no additional support will be required.

6

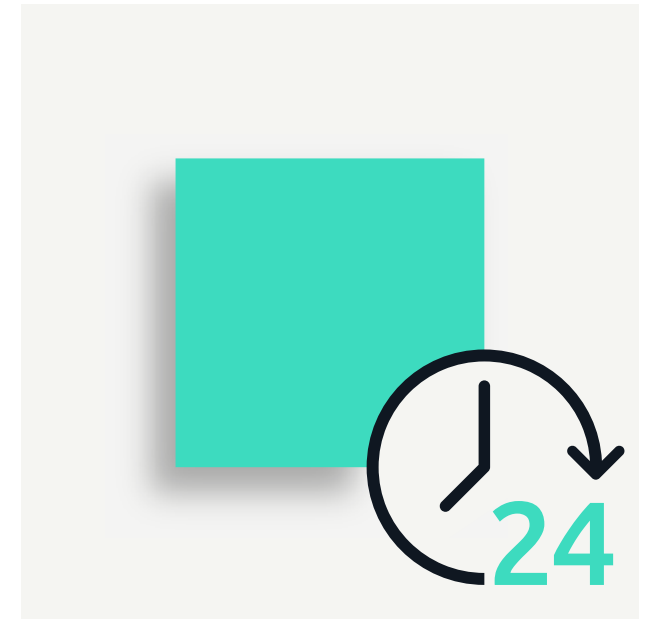

The adhesive will continue to cure over the next 24hrs and form an incredibly strong bond.